




IP Settings IP address 192.168. 0 .151 Subnet mask 255.255.255. 0 Default gateway 192.168. 0 . 1

DATA to read level from ETH port

□ IP Settings		
	IP address	192.168. 0 .151
	Subnet mask	255.255.255. 0
	Default gateway	192.168. 0 . 1


Type in 192.168.0.151 in your webb browser

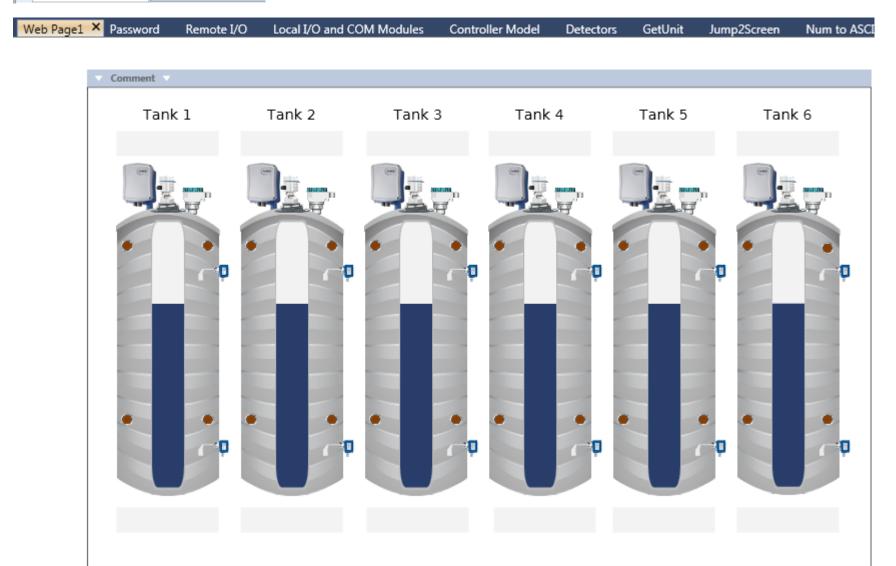






 Tank 1
 Tank 2
 Tank 3
 Tank 4
 Tank 5
 Tank 6

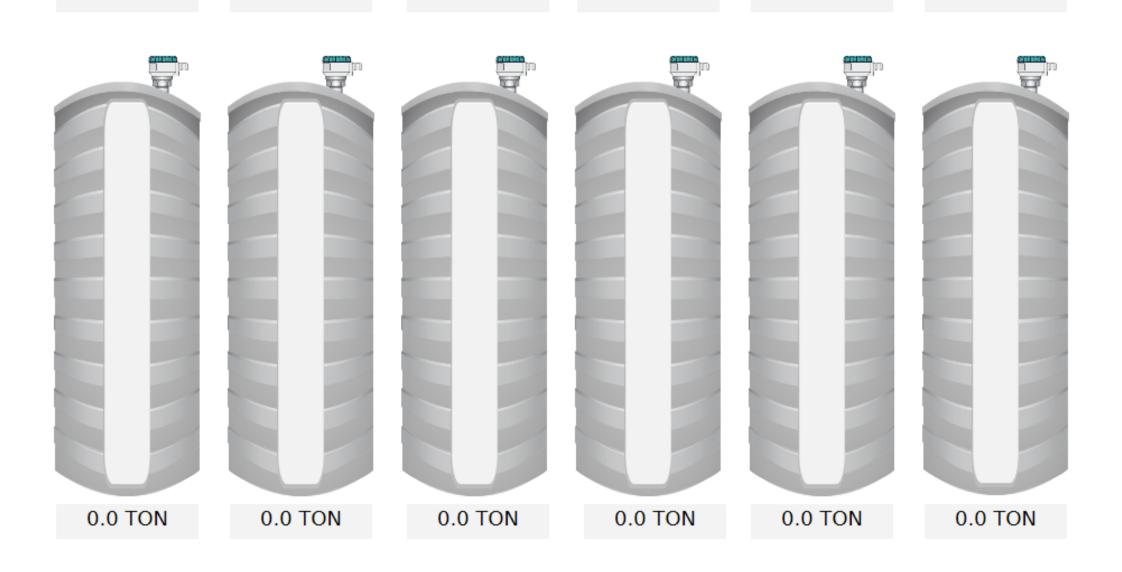

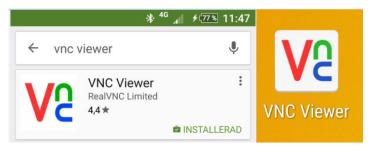

VNC-Connection 192.168.0.151::5900 Password VNC151

