

For details of the communication commands etc. of the communication unit for CC-Link SC-GU3-01, refer to "Product Specification" or "Communication Command Specification."

1 CE MARKED PRODUCT


The models listed under "SPECIFICATIONS" come with CE Marking. As for all other models, please contact our office.

Contact for CE <Until June 30, 2013> Panasonic Electric Works Europe AG Rudolf-Diesel-Ring 2, D-83607 Holzkirchen, Germany <From July 1, 2013> Panasonic Marketing Europe GmbH Panasonic Testing Center Winsbergiring 15, 22525 Hamburg, Germany



2 OUTLINE

Communication unit SC-GU3-01 can output the output signal (in case of 2-output type, only the output 1) of a sensor amplifier (NPN output type) that is connectable to cascading connector unit SC-71 (optional), as the communication data of CC-Link. SC-GU3-01 enables to connect max. 16 units of sensor amplifier (FX-300 series or LS-400 series, etc.). In case of FX-500 series, max. 12 units of sensor amplifier can be connected. This product can output all the output signals of the connected sensor amplifiers to PLC (Programmable Logic Controller) etc. in one time. By using end unit SC-GU3-EU, settings and control of the connected optically communicable sensor amplifier (FX-500 series, LS-403 or DPS-400 series) can be done.

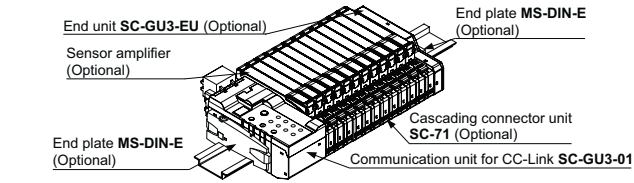

3 FUNCTIONAL DESCRIPTION

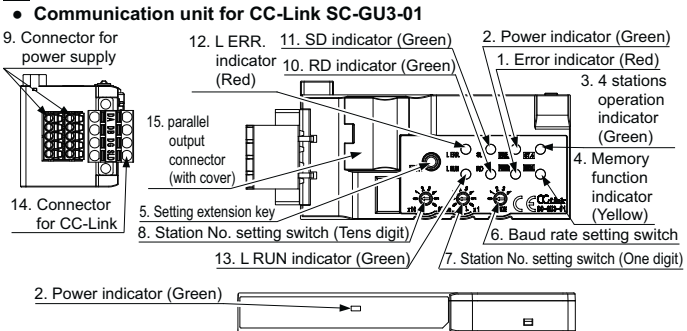


Table with 2 columns: Designation and Function. Includes details for Error indicator, Power indicator, 4 stations operation indicator, Memory function indicator, Setting extension key, Baud rate setting switch, Station No. setting switch, Connector for power supply, RD indicator, SD indicator, L ERR. indicator, L RUN indicator, and Connector for CC-Link.

Notes: 1) In case using the memory function, SC-GU3-EU is required. Refer to "Communication Command Specification" for detail of memory function. 2) For the teaching and memory function, refer to "Communication Command Specification". 3) For changing the setting, use a flathead screwdriver etc.

Thank you very much for purchasing Panasonic products. Read this Instruction Manual carefully and thoroughly for the correct and optimum use of this product. Kindly keep this manual in a convenient place for quick reference.

WARNING icon and text: Never use this product in a device for personnel protection. In case of using devices for personnel protection, use products which meet laws and standards, such as OSHA, ANSI or IEC etc., for personnel protection applicable in each region or country.

Table with 2 columns: Designation and Function. Includes a diagram of the terminal block and a table of signal descriptions (Signal 0 to 10) and their functions.

4 MOUNTING AND CONNECTION


How to mount: 1. Fit the rear part of the mounting section of the unit on a DIN rail. 2. Press down the rear part of the mounting section of the unit on the DIN rail and fit the front part of the mounting section to the DIN rail. How to remove: 1. Push the unit forward. 2. Lift up the front part of the unit to remove it.

How to connect: Be sure that the power supply is OFF while adding / removing units. When the units are mounted in cascade, mount the end plates MS-DIN-E at the both ends of the units to hold them between the flat sides of the plates. Up to maximum 16 sensor amplifiers can be connected in cascade. In case of FX-500, up to maximum 12 sensor amplifiers can be connected in cascade. In case two different models of sensor amplifier are mounted in cascade, be sure to mount identical models together. For the cautions of the sensor amplifiers, refer to the instruction manuals enclosed with the amplifiers.

How to connect (continued): Mount communication unit SC-GU3-01 on DIN rail. Mount cascading connector unit SC-71 (optional) one by one on the DIN rail. Insert sensor amplifiers (Optional) to SC-71. Attach the end connector cap which is removed in the step 1 to the connector area for cascading of the last unit. Mount the end plates MS-DIN-E (optional) at both ends to hold the amplifiers between their flat sides. Tighten the screws of MS-DIN-E to fix the end plates.

How to remove sensor amplifiers

- 1. Press down release lever of SC-71 and pull out the sensor amplifier. (Note) In state of cascading, the sensor amplifiers can be pulled out.

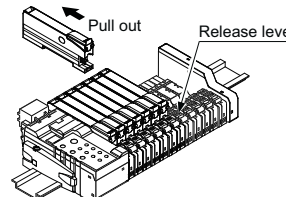

Note: Be sure that the release lever is broken without pressing down release lever when pulling out the sensor amplifiers. Do not use the cascading connector unit that the release lever is broken.

How to remove units

- 1. Loosen screws of MS-DIN-E. 2. Remove MS-DIN-E. 3. Slide SC-71 to disconnect the connection. 4. Remove each units.

5 SELECTION OF NUMBER OF OCCUPIED STATIONS (1 / 4 STATIONS)

- In case of using the end unit SC-GU3-EU (optional), if the number of occupied stations is set to 4 stations, the control can be easily done. In case of not using the SC-GU3-EU, to set the number of occupied stations to 1 station is recommended.

Selecting procedures

- 1. Turn ON the power while pressing the setting extension key. 2. In case the number of occupied stations is set to 4 stations, the 4 stations operation indicator (green) lights up. In case the number of occupied stations is set to 1 station, the 4 stations operation indicator (green) turns OFF. 3. After confirming the switching of the number of stations, turn OFF the power once, then turn ON the power again.

6 MEMORY FUNCTION

- Memory function can be used only when connecting the optically communicable sensor amplifier (FX-500 series, LS-403 or DPS-400 series) and the end unit SC-GU3-EU (optional). This function enables to store the set contents of connected sensor amplifiers in the communication unit SC-GU3-01 by each channel and send the stored contents to newly connected sensor amplifiers by each channel.

When storing set contents

- 1. Turn ON the power in the condition that the sensor amplifiers are connected to SC-GU3-01. 2. Storing starts after pressing the setting extension key down for approx. 2 sec. 3. When the storing to SC-GU3-01 is complete, the memory function indicator (yellow) lights up.

Note: To cancel the memory function, press the setting extension key for approx. 2 sec. again.

When sending the stored set contents

- 1. Turn OFF the power of SC-GU3-01. 2. Remove the sensor amplifiers that are connected to SC-GU3-01 and mount new sensor amplifiers to which the set contents are transmitted to SC-71. 3. When turning ON the power of SC-GU3-01, memory function indicator (yellow) blinks. However, if the setting contents of the connected sensor amplifiers are same as the one that are stored in SC-GU3-01, it lights up. 4. When pressing the setting extension key, transmission of the set contents is started. (Note) 5. When the transmission is complete, the memory function indicator (yellow) turns to light up from blinking.

7 CONNECTION WITH UPPER COMMUNICATION

- Make sure that the power is OFF while wiring. Be sure to use the specified communication cable. The communication distance should be within the specification.

Connection with upper communication: When connecting to the terminal block, insert a solid wire or twisted wire (lead wire) with a ferrule (sleeve) terminal. When connecting the twisted wire (lead wire) without a ferrule (sleeve), insert the wire to the innermost of the connecting hole while pressing the release button. When releasing the solid wire or the twisted wire (lead wire), pull the wire while pressing the release button. The following solid wire and twisted wire (lead wire) are recommended. Power supply line side: 0.2 to 1.0mm² (AWG 24 to 16) CC-Link line side: 0.2 to 2.5mm² (AWG 24 to 12). Use the CC-Link-specified cable (shielded twist-pair cable). Make sure to ground the shielded cable. When mounting the CC-Link connector, the tightening torque should be 0.2N·m or less.

8 ERROR INDICATOR

In case of errors, attempt the following measures.

Table with 4 columns: Indicator, State, Cause, and Corrective action. Lists error indicators like Error indicator (Red) and L ERR. indicator (Red) with their respective states and actions.

9 SPECIFICATIONS

Specifications table with columns: Designation, Communication unit for CC-Link, Model No., Applicable sensor amplifier, Number of connectable units, Supply voltage, Current consumption, Allowable passing current, Communication method, Number of occupied stations, Baud rate, Station No. setting, Remote station type, Ambient temperature, Ambient humidity, Material, and Weight.

Note: It is the value that can supply to SC-GU3-01 or the sensor units connected to SC-GU3-01, etc.

End unit SC-GU3-EU

Specifications table for End unit SC-GU3-EU with columns: Designation, End unit, Model No., Applicable sensor amplifier, Number of connectable units, Supply voltage, Current consumption, Ambient temperature, Ambient humidity, Material, and Weight.

Cascading connector unit SC-71

Specifications table for Cascading connector unit SC-71 with columns: Designation, Cascading connector unit, Model No., Applicable sensor amplifier, Number of connectable units, Ambient temperature, Ambient humidity, Material, and Weight.

10 CAUTIONS

- This product has been developed / produced for industrial use only. Make sure that the power supply is OFF while wiring and adding the units. Take care that wrong wiring will damage the product. Verify that the supply voltage variation is within the rating including the sensor amplifier. In case noise generating equipment (switching regulator, inverter motor, etc.) is used in the vicinity of this product, connect the frame ground (F.G.) terminal of the equipment to an actual ground. Do not use during the initial transient time (1 sec.) after the power supply is switched on. This product is suitable for indoor use only. This product cannot be used in an environment containing inflammable or explosive gases. Never disassemble or modify the product. For details of CC-Link, refer to "CC-Link Manual" prepared by Mitsubishi Electric Corporation. Any protective devices or safety circuits against system malfunction should be designed to be external to the system. In case the EMC Directive is to be satisfied with this product being incorporated into your system, install this product in a conducting box as per User's Manual (issued by Mitsubishi Electric Corporation) of the PLC.

Panasonic Industrial Devices SUNX Co., Ltd.

http://panasonic.net/id/pidsx/global Overseas Sales Division (Head Office) 2431-1 Ushiyama-cho, Kasugai-shi, Aichi, 486-0901, Japan Phone: +81-568-33-7861 FAX: +81-568-33-8591 About our sale network, please visit our website. PRINTED IN JAPAN © Panasonic Industrial Devices SUNX Co., Ltd. 2013